

# SURFACE SPALLS/DEFECTS - Less than 6"



## REPAIR MATERIAL

**Structural Repair**

**Polyurea**

**Rapid Refloor**

**Freezer/Cooler**

**Rapid Refloor**

## TOOLS & EQUIPMENT NEEDED

**Preferred:**

Drill with Nyalox or soft wire wheel, Medium grit grinding pad, Vacuum/ Compressed air

**Minimal:**


Wire brush, Vacuum/Compressed air

## DIFFICULTY



### STEP 1


Run drill with soft wire or Nyalox wheel over defects twice (in opposite directions). Vacuum defect clean.

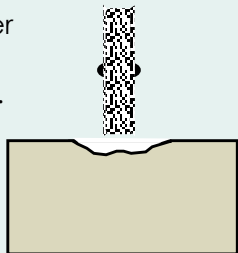

### STEP 2

Slightly overfill defect with **Rapid Refloor** repair material and allow to cure.

Grind off overfill flush to floor surface with Norton Rapid strip pad or similar medium grit grinding pad.

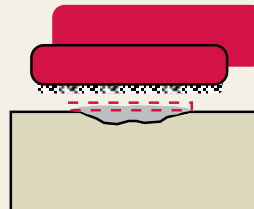

Ex. Surface Filled



Ex. Surface Finished