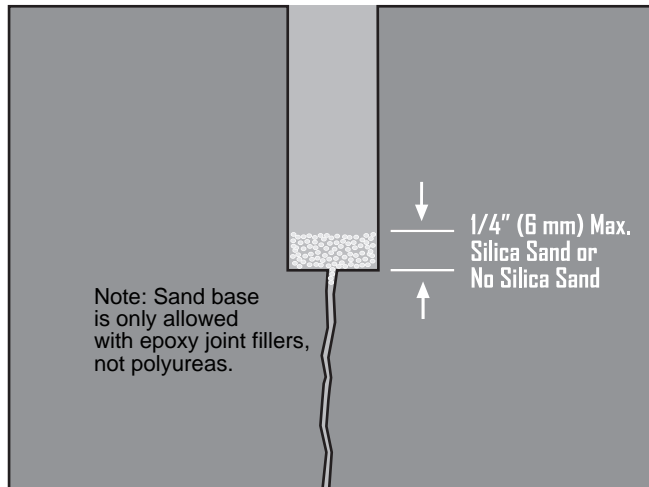
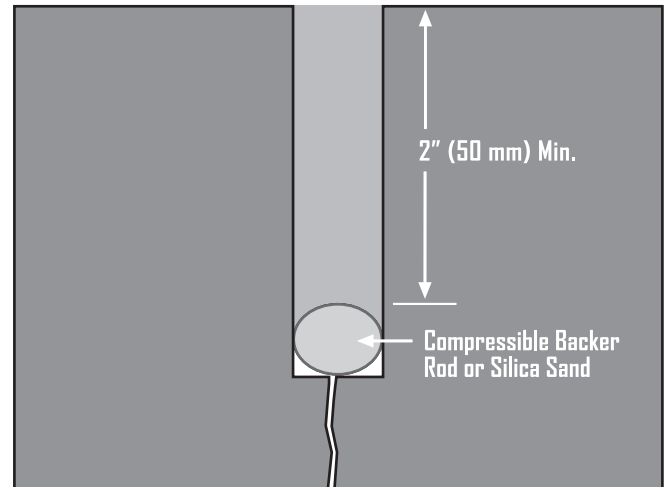
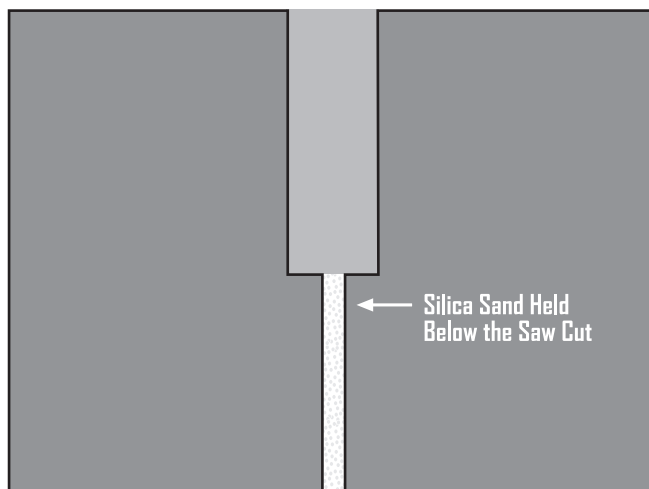
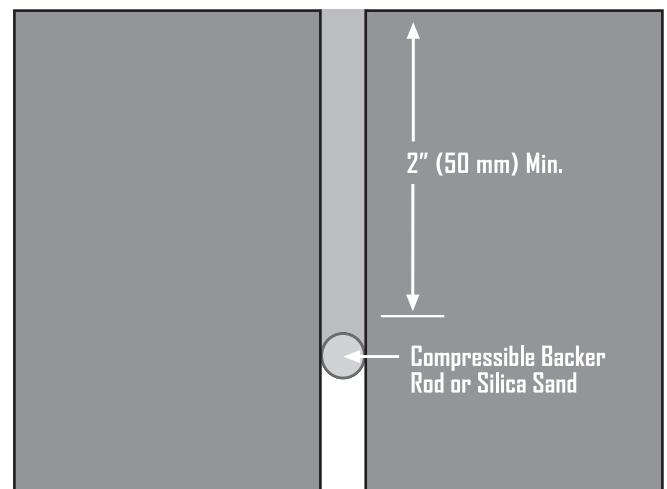


**Standard Floor Joint Filling Details**

The following details comply with both American Concrete Institute (ACI) and Portland Cement Association (PCA) guidelines for the installation of a semi-rigid epoxy or polyurea floor joint filler.

**Saw Cut Joint Less Than 2" (50 mm) Deep****Saw Cut Joint More Than 2" (50 mm) Deep****Saw Cut Construction Joint****Construction Joint Not Saw Cut**

Note: Some installers may propose filling procedures that differ slightly from the above details. See [Technical Bulletin T16](#) for additional procedures that are acceptable to Metzger/McGuire.

V1-19